TOYOSTOVE®

TOYOTOMI

Oil Mi$er

LASER & OIL MISER VENTED HEATING SYSTEMS ACCESSORIES

USE ONLY TOYOSTOVE & OIL MISER GENUINE PARTS AND ACCESSORIES
ALL PARTS AND ACCESSORIES ARE US & C ETL LISTED.

ACCESSORY/PART NO.

Standard Flue Pipe
#20479891

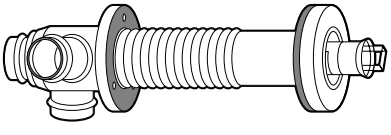

For TOYOTOMI VENTED HEATERS

Flue Pipe Extension — For use with Standard Flue Pipe #20479891

#20479887	For use in wall thickness from 9 to 13 in.
#20479873	For use in wall thickness from 13 to 16 in.
#20479874	For use in wall thickness from 16 to 20 in.
#20479875	For use in wall thickness from 20 to 24 in.





Extension Pipe Kits — For Use With:

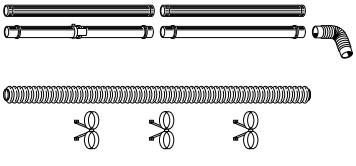

All Vented Heater installations where the heater is to be located away from the flue pipe.

Contains all parts necessary for extension installations as specified in the chart below.

	LONG	MEDIUM	SHORT
PART NUMBER	20479898	20479897	20479896
Length capacity for extension installations	61-3/4 to 78-3/4 inches	22-1/2 to 39-3/8 inches	12-5/8 to 19-5/8 inches

FUEL LIFTER PUMP
MODEL
OPT-91UL
#20477500

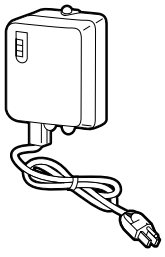

Pumping system for use with one or more Laser and/or Oil Miser Heating Systems where gravity fed does not meet specifications. (see owner's manual.)
Automatic recovery feature after power outage.

Joint Attaching Screw Kit
#20479590

For Laser 30/56/560

KIT CONTENTS
1 × Screw 1U (#20478091)
1 × Metal washer
1 × Fiber gasket

Pressure Reducing Valve
#10005099

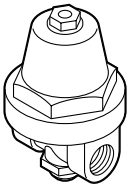

If the maximum height from top of the fuel tank to the bottom of the heater exceeds 8-1/2 ft., a fuel pressure reducing valve is required, preset at 2.5 psi.

Spacer
#20478967

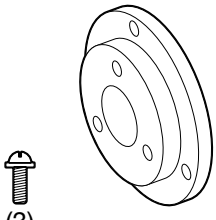

For use with Standard Flue Pipe #20479891

with Screw M (#20474272) × 3

Fusible Link Valve
#10005597

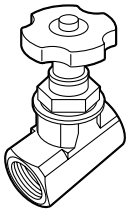

For all vented heaters

Except for new models:
Laser 300/530/560/730/730AT

Oil Guide
#20479725

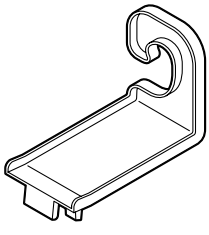

For OM-22, OM-23 only

Removable Fuel
Tank with Hose
for Laser 55/56/560
#20475922



Tank capacity: 1.95 gal.
NOTE: Fuel supply hose for
Laser 55/56/560:
#20475925

Overflow Tube
#20474901

For OPT-81UL, OPT-91UL

Only needed when 2 or more lifter pumps are used in series. (See owner's manual for details.)



Gasket Service Kit
#20479830

For Laser 530, OM-22/23 only

KIT CONTENTS:
1 × Igniter gasket (#17187582)
1 × Flame rod gasket (#20479511)
1 × Relief gasket (#20479591)
1 × Fuel nozzle gasket (#20479883)
1 × Outside nozzle gasket (#20479885)
1 × Heat exchanger gasket (#20479893)

Installation Hardware Kit

#20478786 — For Laser 56 (H, I, J, K), Laser 73 (K, L, M, N) Laser 560, Laser730

Oil catch (#20474925)
Intake air cap (#20474949)
Intake pipe (#20474951)
Wall bracket (#20474962)
Pipe holder (#20474963)
Pipe stopper (#20474964)
L-shaped hose (#20474975)
Hose band (#20474977)
Bent joint (L) (#20474984)
Spacer (#20478967)
Exhaust air cap (#20479845)
Exhaust extension pipe (S) (#20479856)
Flue pipe (#20479891)

#20479880 — For OM-22, OM-23, Laser 30 Laser 300, Laser 530

Oil catch (#20474925)
Intake air cap (#20474949)
Pipe holder (#20474963)
Hose band (#20474977)
Wall bracket (2 sets) (#20479562)
Pipe stopper (#20479864)

Does not include the Flue Pipe (#20479891), Inlet Hose (#20474951), L-Shaped Hose (#20474975) (2 pcs.), Insulating Cloth Cover (#20474955) and Bent Joint (#20479884) for OM-22/23 and (#20479584) for Laser 30.

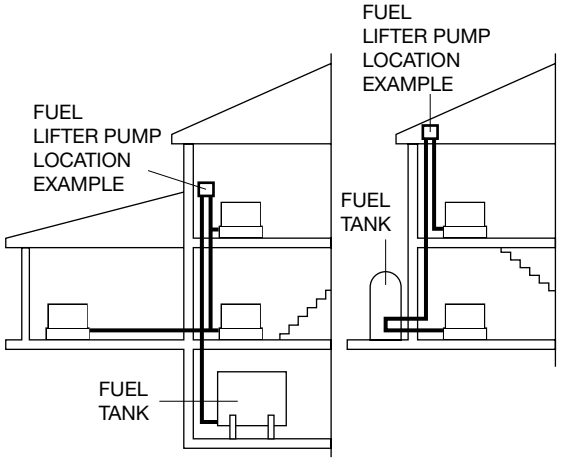

FUEL LIFTER PUMP/GRAVITY
NOTE: Max. Lifting Height : 26 ft.

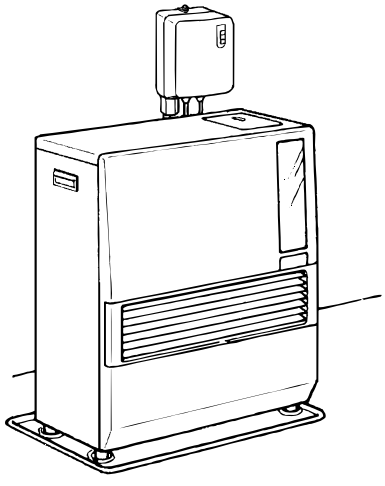

FUEL LIFTER PUMP
(CAN BE POSITIONED BEHIND UNIT)

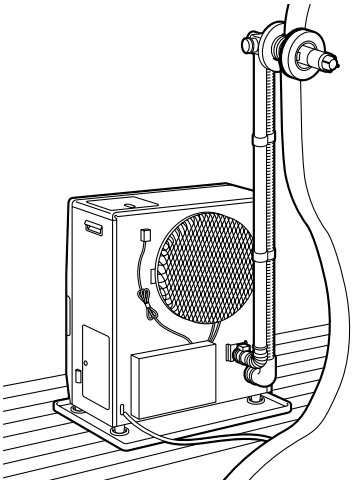

LONG, MEDIUM OR SHORT
EXTENSION KIT

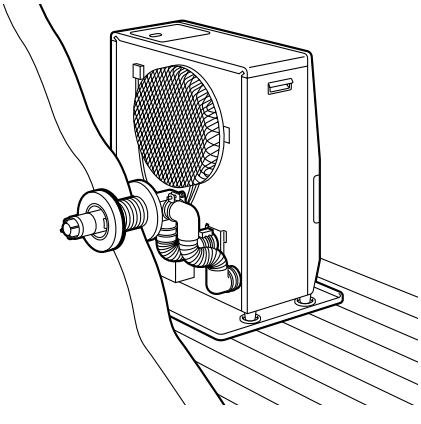

STANDARD FLUE PIPE

For specialized installations, the additional extension kit parts shown below may be purchased from a TOYOSTOVE dealer.
In any installation the following limitations must NOT be exceeded:

1. The total length of extension pipes between the heater and the flue pipe must not exceed 10 feet for each the air intake hose and the exhaust pipe.
2. Neither air intake hose nor the exhaust pipe may have more than 3 elbows/bends, including the elbow at the heater. The air intake hose elbow supplied with the heater and the internal bend in the flue pipe are not counted as elbows.

PART NAME/PART NUMBER	DESCRIPTION	PART NAME/PART NUMBER	DESCRIPTION
L-Shaped Exhaust Joint #20479861 (Connection between exhaust pipes)		O-ring (ø39) (Exhaust of Flue Pipe) #20475879	
Exhaust Extension Pipe #20479872		O-ring (ø42) (Intake of Flue Pipe) #20475880	
Exhaust Extension Pipe (S) #20479856		Pipe Stopper #20474964 (for all other heaters) #20479864 (for Laser 300/530/ OM-22/ 23 only)	
Adjustable Exhaust Pipe (L) #20479853		Air Damper #20478366 (for Laser 56/560/73/730/60AT) #20479567 (for Laser 30) #20479866 (for Laser 300/530/OM-22/23)	
Adjustable Exhaust Pipe (S) #20479858		L-Shaped Hose #20474975	
Flexible Exhaust pipe (M) #20479888		Hose Band #20474977	
Flexible Exhaust pipe (L) #20479889		Intake Pipe Joint #20474954	
Intake Pipe #20474951 (78" long) For all models #20470261 (15 3/4 " long) L300, & 530 #20470651 (7 7/8" long) L 560, & 730		Pipe Support Hardware #20474950	
Insulating Cloth Cover #20474955		Sleeve Cap #20474978 Use with wall sleeve only (#20479867)	
Wall Bracket (2 sets) #20474962 (for all other heaters) #20479562 (for Laser 30/300/530/ OM-22/23)		Oil Catch #20474925	
Pipe Holder #20474963		Exhaust Air Cap (Metal) #20479845	
Bent Joint #20474984 (for all other heaters) #20479584 (for Laser 30/300) #20479884 (for Laser 530/OM-22/23)		Intake Air Cap (Rubber) #20474949	

*Check state and local codes for permitted uses.

*Subject to change with or without notice.

TOYOTOMI U.S.A., INC.
604, Federal Road, Brookfield, CT 06804
(203)775-1909

DISTRIBUTOR / DEALER NAME

Rev. 04/16
PART NO. B8900009

Printed in Japan